



11 PIECE COPPER EFFECT COOKWARE SET

Product Instructions

Product No. 1500089

vonshef

Let's get started!

Visit our product hub for useful tips and tricks on getting the most out of your new product.

SCAN ME



Need further help?
support@vonhaus.com

See our full range at
www.vonhaus.com

Information

Important Safety Notice

This product is not suitable for use by children or by individuals with physical, sensory, or mental impairments that may limit their ability to operate the equipment safely, unless they have been given supervision or instruction concerning the safe use of the product by a person responsible for their safety.

Improper use may result in serious injury. Always ensure the operator is capable of understanding and following all safety instructions provided in this manual.

Before First Use

Before using your cookware for the first time, remove all packaging, stickers and labels from the product and store or dispose of safely.

Wash the cookware thoroughly in warm, clean, soapy water with a soft cloth and mild detergent.

Dry thoroughly using a clean, dry cloth or paper towel. Never allow the cookware to air-dry naturally as this can tarnish the surface.

Cleaning & Maintenance

Always wash after each use. Wash in warm, clean, soapy water with a mild detergent and soft sponge. Dry thoroughly afterwards.

Never use to store food. Residue, salts, sugars and acids released by food can damage the cookware. Always allow your cookware to cool fully before attempting any cleaning or storage.

Do not immerse in, or fill with, cold water when hot. Do not use any metal, harsh abrasive or

very stiff pads/washing up brushes, or abrasive cleaning agents on any of the surfaces.

Stubborn stains can be removed using a suitable non-metallic scouring pad.

Salt spots, tarnishing and stains can be removed using mild detergents specially formulated for cleaning cookware and similar items. Wash thoroughly after use of such products.

It is recommended that you place a paper towel between cookware if stacking to prevent damage to the surfaces.

General Safety

- The cookware is not suitable for use in a dishwasher.
- The cookware is not suitable for use in microwave ovens.
- The cookware is not suitable for deep or shallow frying.

The cookware is suitable for oven temperatures of up to 220°C/430°F unless otherwise stated in the listings or on the product itself.

Place on a suitable rack in the middle of the oven. Never handle with bare hands. Use a suitable heat-resistant oven glove, grasping firmly by the handle(s) where applicable.

Never subject to sudden temperature changes as this may cause damage to the product. Never use sharp or metal utensils, knives or implements with your cookware. To protect the product, we recommend using silicone, heat-resistant plastic or wooden tools. Sharp knocks, impact or dropping your cast iron ovenware can cause damage. Do not use damaged items. Do not fill the cookware to more than 2/3 the capacity.

Usage & Safety



Please read all instructions carefully before use and retain for future reference.



Materials approved for food use.



Not dishwasher safe.




Not suitable for microwave use.


Refer to the symbols displayed below to ensure suitability for your hob.

IMPORTANT Always dry the base of your cookware before cooking.

IMPORTANT Always match the base to the hob or heat zone. Gas flames must always be confined to the base area and never allowed to extend up and around the sides of your cookware. Take care to centre your cookware to get the most from your hob.

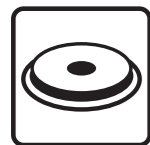

Electric

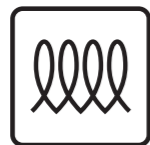

Induction



Gas



Halogen



Ceramic

Information

Customer Service

If you are having difficulty using this product and require support, please contact support@vonhaus.com

Warranty

To register your product and find out if you qualify for a free extended warranty please go to www.vonhaus.com/warranty

Please retain a proof of purchase receipt or statement as proof of the purchase date.

The warranty only applies if the product is used solely in the manner indicated in the warnings page of this manual, and all other instructions have been followed accurately.

Any abuse of the product or the manner in which it is used will invalidate the warranty.

Returns

Returned goods will not be accepted unless re-packaged in its original packaging and accompanied by a relevant and completed returns form. This does not affect your statutory rights.

No rights are given under this warranty to a person acquiring the appliance second-hand or for commercial or communal use.

Copyright

All material in this instruction manual are copyrighted by DOMU Brands.

Any unauthorised use may violate worldwide copyright, trademark, and other laws.

Thank You

Thank you for purchasing your product/appliance.

Should you require assistance with your purchase, please contact us at support@vonhaus.com

Vonhaus is a registered trademark of DOMU Brands Ltd.

Made in China for DOMU Brands Ltd.
Unit 30, Stakehill Industrial Estate
Middleton, Manchester, M24 2RW

EU Authorised Representative

Authorised Representative Service
77 Camden Street Lower
Dublin, D02 XE80
Ireland

Let's get started!

Visit our product hub for useful tips and tricks on getting the most out of your new product.

SCAN ME

