

# HEATED THROW

## Product Instructions

Product No. 2000279 / 2500872.1 / 2500456.1

**vonhaus**


### Let's get started!

Visit our product hub for useful tips and tricks on getting the most out of your new product.

### SCAN ME



## Product Diagram

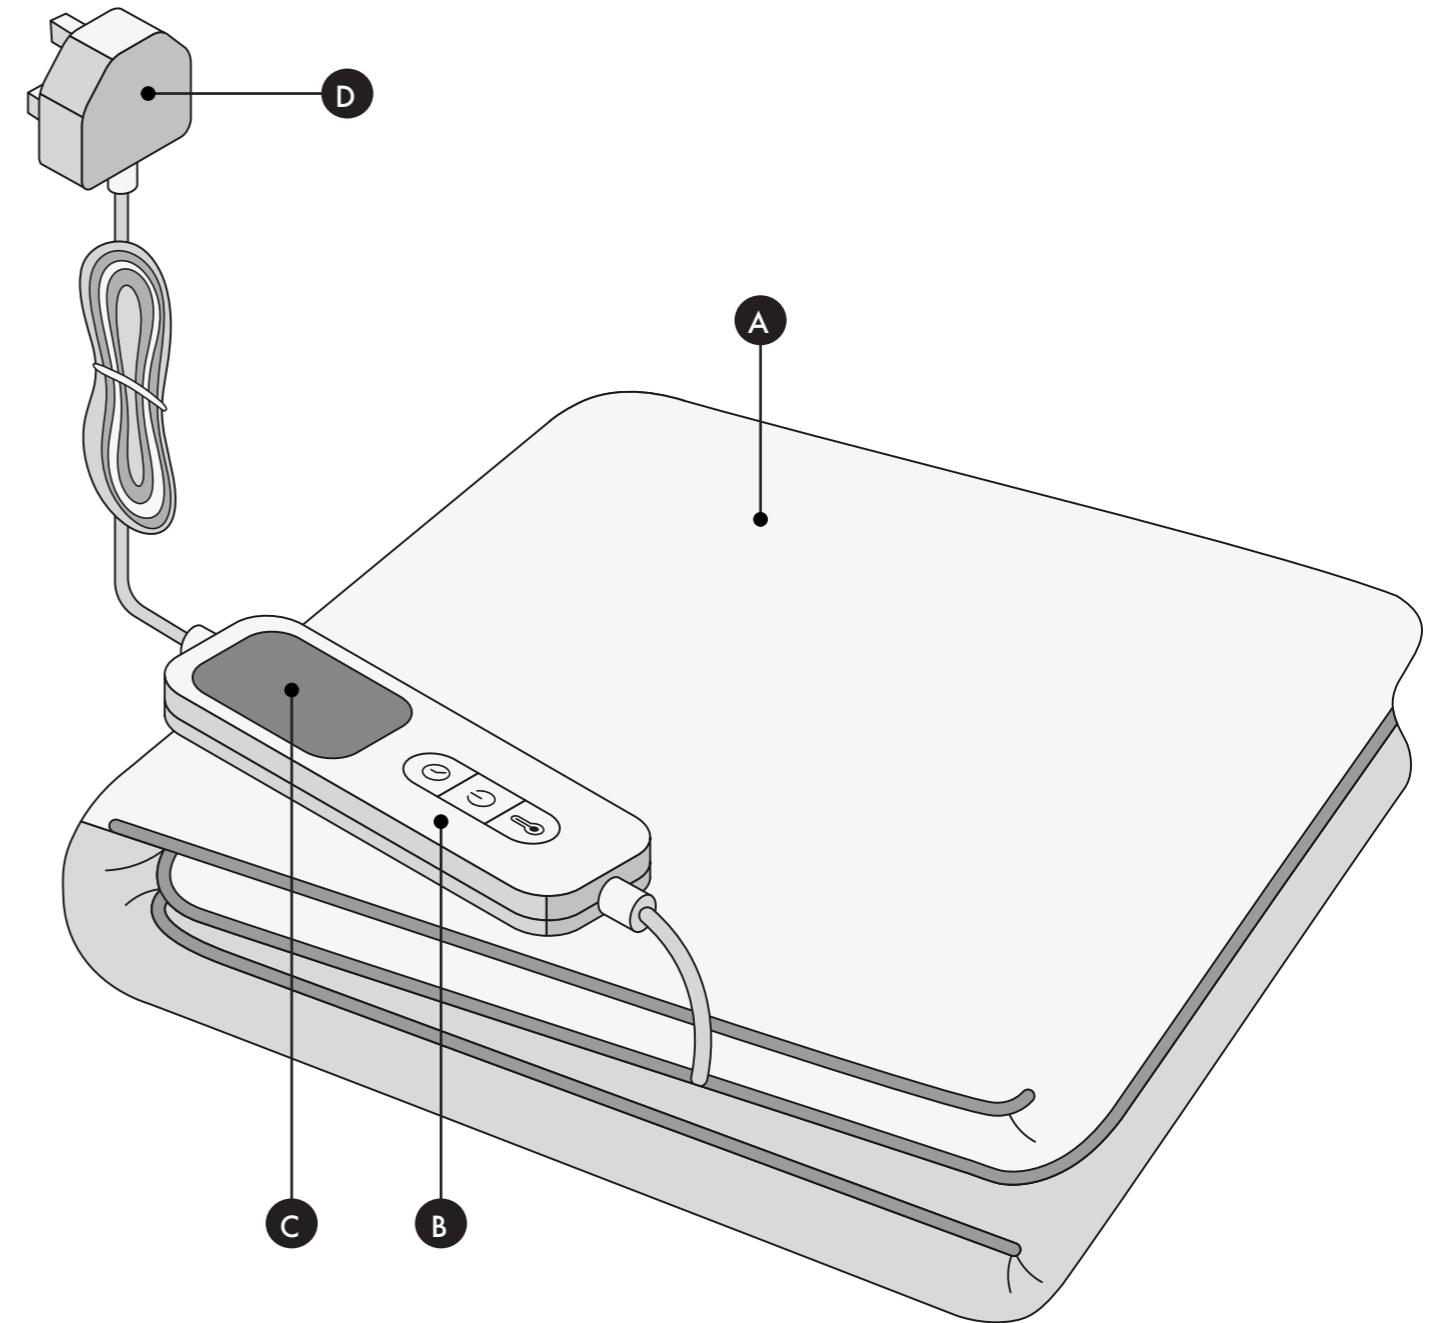


Need further help?  
support@vonhaus.com

See our full range at  
www.vonhaus.com

A. Heated Blanket  
B. Controller

C. Digital Display  
D. Plug

# Operation

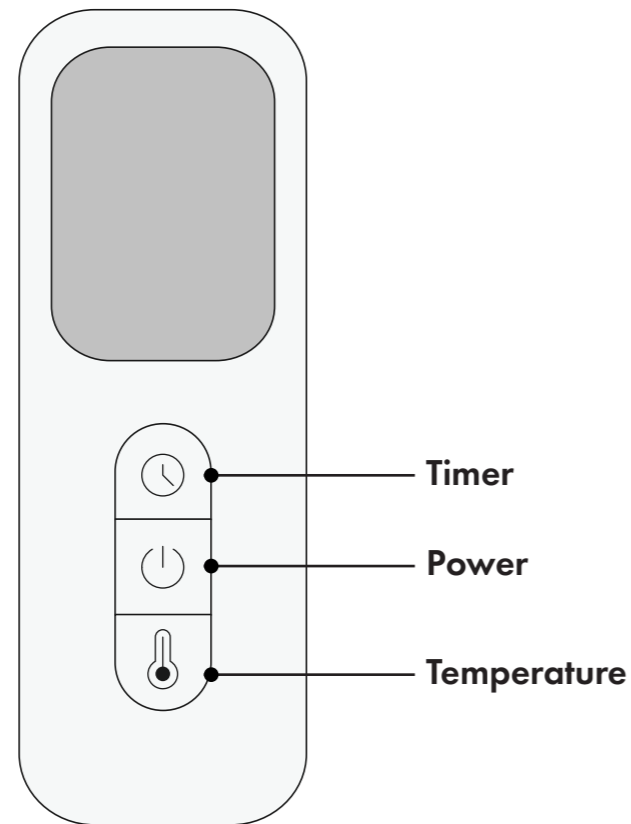

## Getting Started

1. Plug the blanket into a wall outlet
2. Press the power button
3. Press the temperature setting button
4. The blanket will start heating (default setting is level 5)
5. The indicator light will turn on

## Adjusting Temperature

- **For higher heat:** Set temperature to level 6-9
- **For lower heat:** Set temperature to level 1-4

**Note:** If set at level 5 or higher for more than 3 hours, it will automatically decrease to level 5

## Setting Timer

- **Default auto-off time:** 1 hour
- **For longer heating:** Set timer between 2-9 hours
- **Timer options:** 1, 2, 3, 4, 5, 6, 7, 8 or 9 hours.

## Turning Off

- Press the power button
- The indicator light will turn off
- Unplug the blanket from the wall outlet

## Safety Reminder

Always set the blanket to level 1 before sleeping or using for extended periods

# Usage & Safety



Please read all instructions carefully before use and retain for future reference.



Do not use outdoors.



Unsuitable for children under 3.



Do not iron.



Do not wring dry.



Do not use folded or tucked.



Do not dry clean.



Do not bleach.



Do not pierce or use sharp objects near the blanket.



Do not tumble dry.



Do not wash above  
30°C / 86°F

# Usage & Safety

---

## Cleaning Your Electric Blanket

### Before Cleaning

1. Unplug the blanket from the wall outlet
2. Let it cool for at least 10 minutes

### Washing Instructions

- Remove the detachable cable from the blanket
- Washing options:
  - Hand wash (recommended to extend product life)
  - Machine wash at maximum 30°C using gentle cycle and low spin

### Drying Instructions

- Do not use a hair dryer
- Dry naturally by laying flat on a surface
- Make sure the blanket is completely dry before using again
- Do not dry the blanket in the sun

### Rinsing and Storage

- Rinse thoroughly to remove all detergent
- Store flat in a clean, dry place
- Don't place items on top of the blanket during storage

## Safety Warnings

- Use only with supplied controller
- Do not pierce with pins or sharp objects
- Not for use by children under 3, sleeping persons or those insensitive to heat
- Children 3-8 may use only under supervision at minimum temperature
- Children 8+ may use if properly instructed about safe use
- Inspect regularly for damage; return to supplier if faulty

- Not for medical or hospital use
- High heat settings may cause burns
- Never use when wet or in bathrooms
- Damaged cables must be replaced by qualified professionals
- Cool completely before storing
- Store in original packaging in a dry place
- Arrange cables safely to prevent entanglement or tripping
- Never use pegs or clips on the heated portion of the blanket. These can pinch or break the internal heating elements. Instead, drape the blanket evenly over a sturdy, clean clothesline or a drying rack.
- Use mild detergent
- Use a laundry bag or pillowcase to reduce rubbing in the drum

## Technical Specifications

- Rated Voltage: 220-240V
- Rated Power: 160W
- Rated Frequency: 50/60Hz

### Off Mode Consumption:

- 2000279: 0.295W
- 2500872.1: 0.295W
- 2500456.1: 0.295W

# Legal

---

## Disposal Information

Please recycle where facilities exist. Check with your local authority for recycling advice.

## Customer Service

If you are having difficulty using this product and require support, please contact [support@vonhaus.com](mailto:support@vonhaus.com)

## Warranty

To register your product and find out if you qualify for a free extended warranty please go to [www.vonhaus.com/warranty](http://www.vonhaus.com/warranty)

Please retain a proof of purchase receipt or statement as proof of the purchase date.

The warranty only applies if the product is used solely in the manner indicated in the warnings page of this manual, and all other instructions have been followed accurately.

Any abuse of the product or the manner in which it is used will invalidate the warranty.

## Returns

Returned goods will not be accepted unless re-packaged in its original packaging and accompanied by a relevant and completed returns form. This does not affect your statutory rights.

No rights are given under this warranty to a person acquiring the appliance second-hand or for commercial or communal use.

## Copyright

All material in this instruction manual are copyrighted by DOMU Brands.

Any unauthorised use may violate worldwide copyright, trademark, and other laws.

## Thank You

Thank you for purchasing your product/appliance.

Should you require assistance with your purchase, please contact us at [support@vonhaus.com](mailto:support@vonhaus.com)

VonHaus is a registered trademark of DOMU Brands Ltd.

Made in China for DOMU Brands Ltd.  
Unit 30, Stakehill Industrial Estate  
Middleton, Manchester, M24 2RW

## EU Authorised Representative

Authorised Representative Service  
77 Camden Street Lower  
Dublin, D02 XE80  
Ireland

## Let's get started!

Visit our product hub for useful tips and tricks on getting the most out of your new product.

**SCAN ME**

