

CLEANING

- Dampen a clean, dry cloth (non-scratching and preferably microfibre) with water and gently wipe the surface. The moisture will collect the dust and prevent any flyaway dust particles.

CAUTION: Avoid using any abrasive cleaning solvents on the Furniture as this may damage the surface.

CUSTOMER SERVICE

If you are having difficulty using your product and require support, please contact hello@domu.co.uk

DISPOSAL INFORMATION

Please recycle where facilities exist. Check with your local authority for recycling advice.

WARRANTY

To register your product and find out if you qualify for a free extended warranty please go to

www.VonHaus.com/warranty.

Please retain a proof of purchase receipt or statement as proof of the purchase date.

The warranty only applies if the product is used solely in the manner indicated in the Warnings page of this manual, and all other instructions have been followed accurately. Any abuse of the product or the manner in which it is used will invalidate the warranty.

Returned goods will not be accepted unless re-packaged in its original packaging and accompanied by a relevant and completed returns form. This does not affect your statutory rights.

No rights are given under this warranty to a person acquiring the appliance second-hand or for commercial or communal use.

COPYRIGHT

All material in this instruction manual are copyrighted by DOMU Brands.

Any unauthorised use may violate worldwide copyright, trademark, and other laws.

Thanks you for purchasing the
Capri Large TV Unit With 1 Pull Down Door and 1 Panel Door.

VonHaus® is a registered trademark of DOMU Brands Ltd
Made in China for DOMU Brands Ltd M24 2Rw.

CAPRI LARGE TV UNIT WITH 1 PULL DOWN DOOR AND 1 PANEL DOOR

3000035 Instruction Manual




CONTENTS

Safety Instructions	1
Components	2
Assembly	3
Assembly	4
Assembly	5
Assembly	6
Assembly	7
Assembly	8
Assembly	9
Cleaning & Maintenance, Warranty	10




ASSEMBLY

12

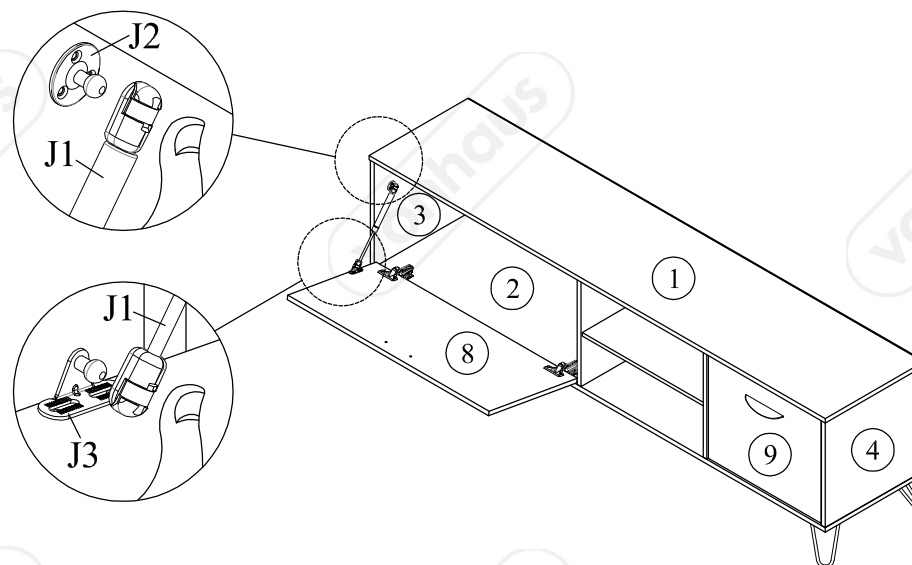



ASSEMBLY

11

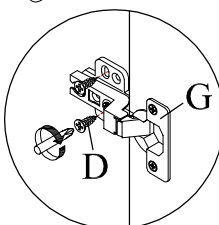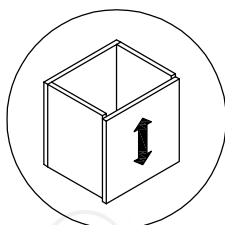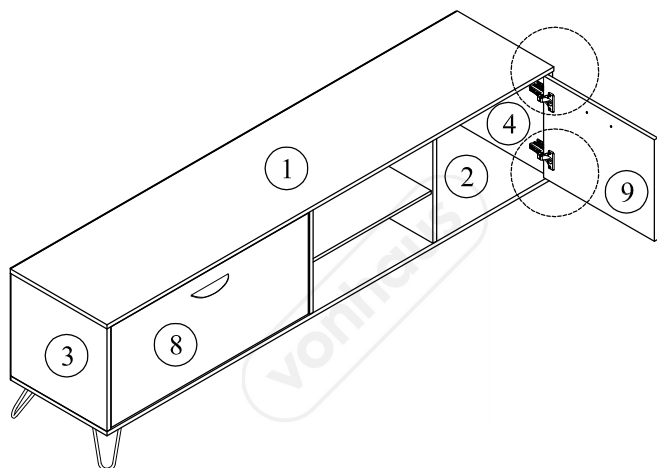



Height adjustment

Rotate cam screw on mounting plate to adjust door position ($\pm 2\text{mm}$).
On non-cam mounting plates, loosen screws, adjust door and re-tighten screws.

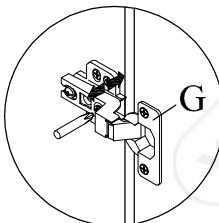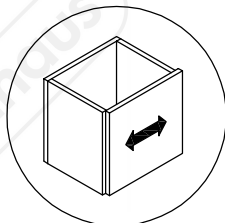

Side adjustment

Rotate front screw to increase or decrease door overlay $\pm 2\text{mm}$.

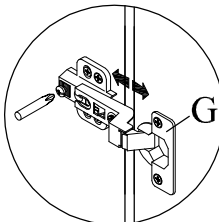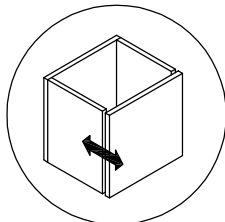

Depth adjustment

Rotate rear spiral Tech cam screw to adjust door position ($+3\text{mm}$, -2mm).
For CLIP hinges, loosen rear screws, adjust door and re-tighten screws.

⚠ WARNING ⚠

PLEASE READ THESE INSTRUCTIONS CAREFULLY AND KEEP FOR FUTURE REFERENCE

IMPORTANT SAFETY INSTRUCTIONS

This product is intended for indoor and domestic use only.

Do not use this product for any purpose other than that for which it is designed.

This product is not a Toy. Children should be supervised to ensure they do not play with the product.

WARNING! Ensure children never stand on, or rest on this product as this can cause damage or injury.

CAUTION: The assembly pack contains small parts which pose a choking hazard to children and pets. Keep children and pets clear at all times during assembly.

Locate the this product in a suitable area where it will not be an obstruction.

Do not store the this product near any heat sources such as radiators of fires.

WARNING! Never stand on, or rest on this product as this can cause damage or injury.

Do not overload the product as this may result in damage to the product or personal injury.

Do not clean this product with any abrasive chemicals, solvents and detergents as this can damage the surface.

Do not use this product if any parts are missing, damaged or worn.

Do not use this product unless all fixings are secured.

Do not push this product as this will cause damage.

Periodically check all screws & fixings to ensure they are secure.


Take care not to over tighten any fixings as this could damage the product.

Ensure you have sufficient space to assemble the product.







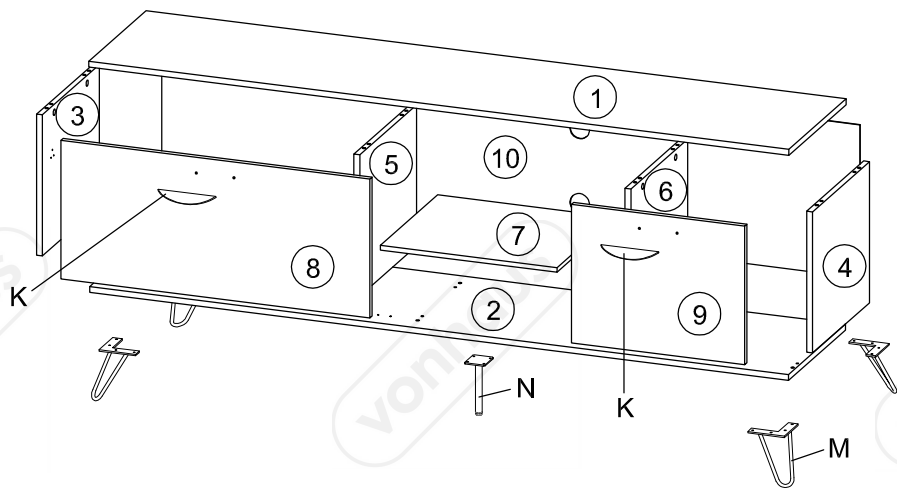











Always lift this product with two people to reposition.

Keep any sharp objects away from this product.

 CAUTION: Do not use any power tools to assemble the product as this could cause damage to fixings the frame and will invalidate any claim.






HARDWARE LIST

A. MINIFIX 8 pieces A1  A2  A3 	H. STOPPER (2 PIN) 2 pieces 
B. Ø8x30mm WOOD DOWEL 16 pieces 	I. METAL SHELF SUPPORT 4 pieces 
C. M6x50mm CSK CAP WOOD SCREW 8 pieces 	J. 10" AIR PRESS PULL ROD 1 piece J1  J2  J3 
D. M3.5x16mm C.B SCREW 49 pieces 	K. HANDLE PVC 1910.96 2 pieces 
E. ALLEN KEY M4 1 piece 	L. M4x25mm C.B SCREW 4 pieces 
F. 5/8 NAIL 32 pieces 	M. METAL LEG 90 x 90 x 10 x H145mm 4 pieces 
G. SOFT CLOSING 7/8 HINGES 4 pieces 	N. ADJUSTABLE METAL LEG 50 x 50 x H140mm 1 piece 



ASSEMBLY

10

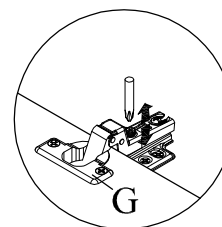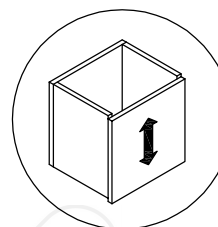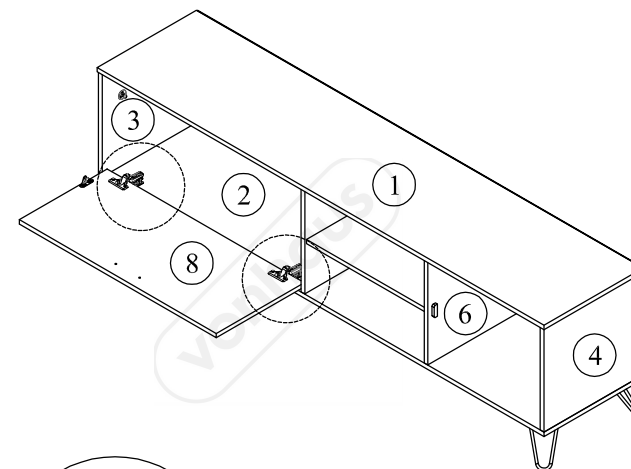



Height adjustment

Rotate cam screw on mounting plate to adjust door position ($\pm 2\text{mm}$).
On non-cam mounting plates, loosen screws, adjust door and re-tighten screws.

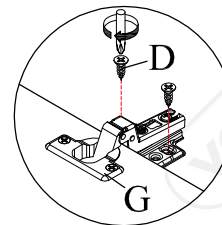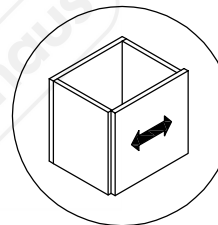

Side adjustment


Rotate front screw to increase or decrease door overlay $\pm 2\text{mm}$.

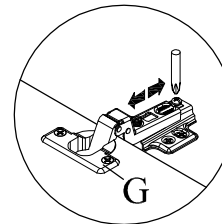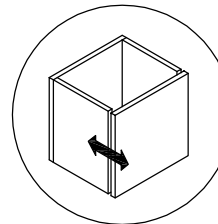


Depth adjustment

Rotate rear spiral Tech cam screw to adjust door position ($+3\text{mm}$, -2mm).
For CLIP hinges, loosen rear screws, adjust door and re-tighten screws.


ASSEMBLY

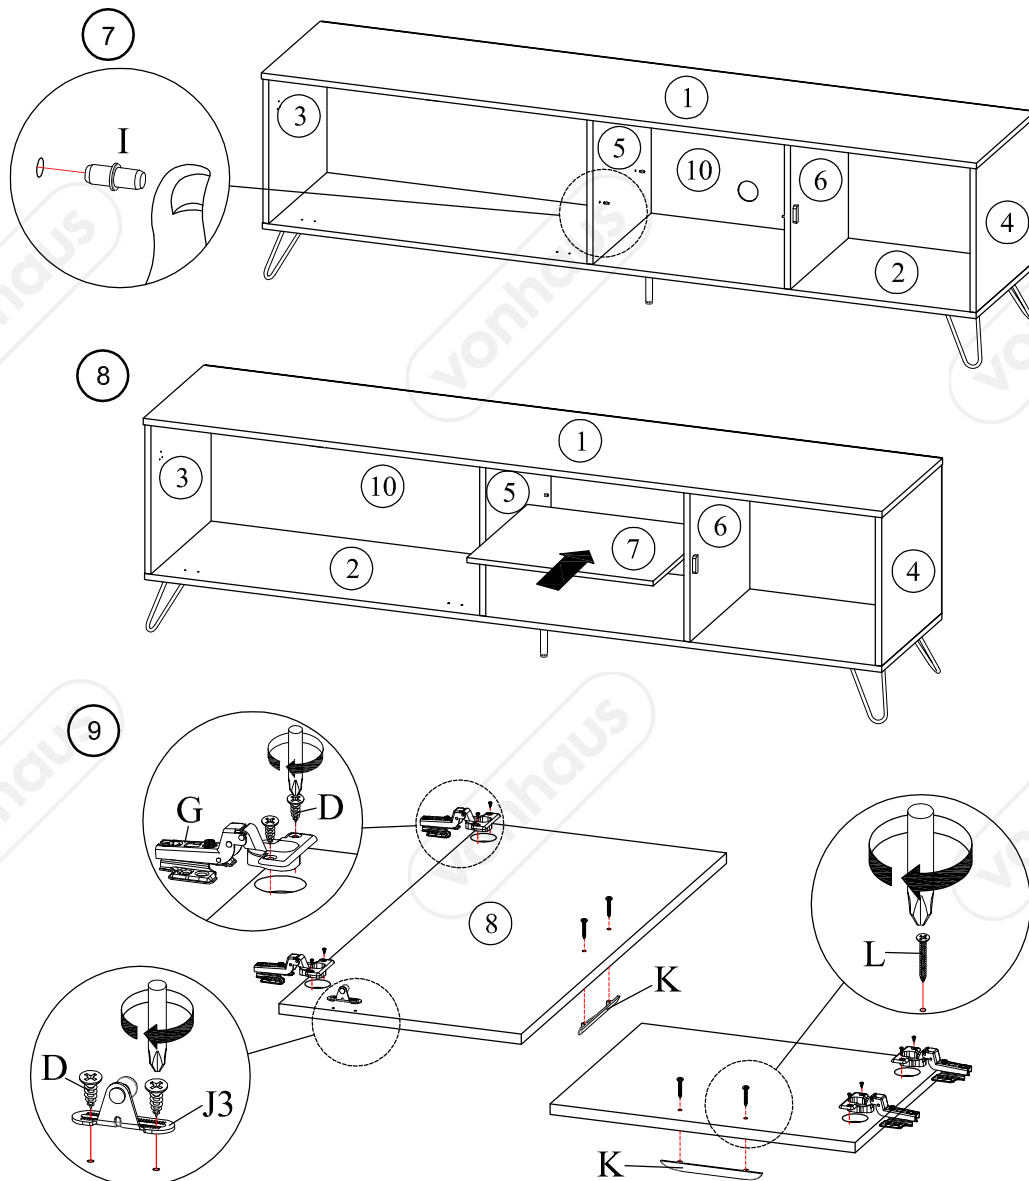

ASSEMBLY

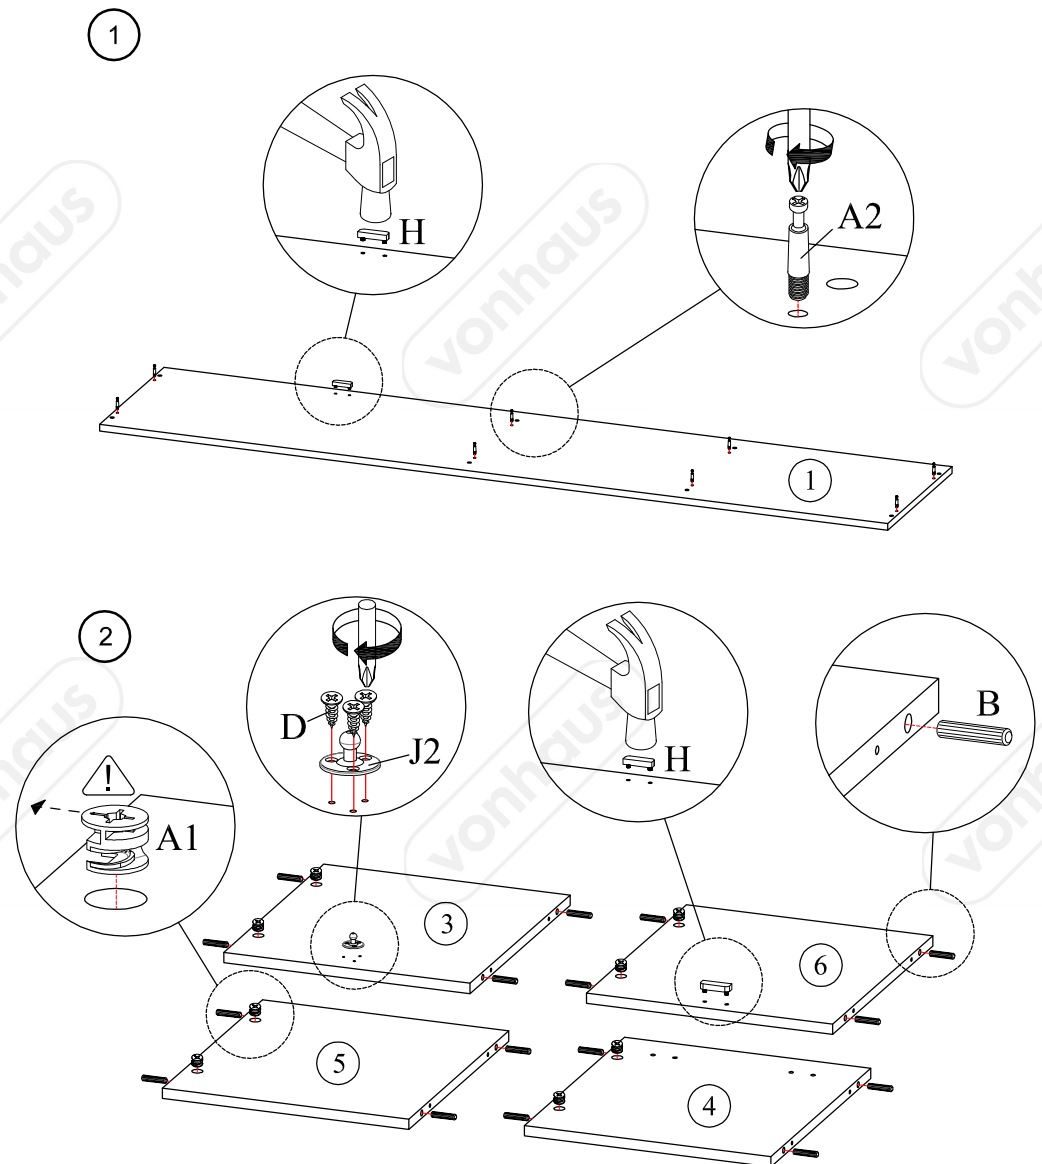


ASSEMBLY

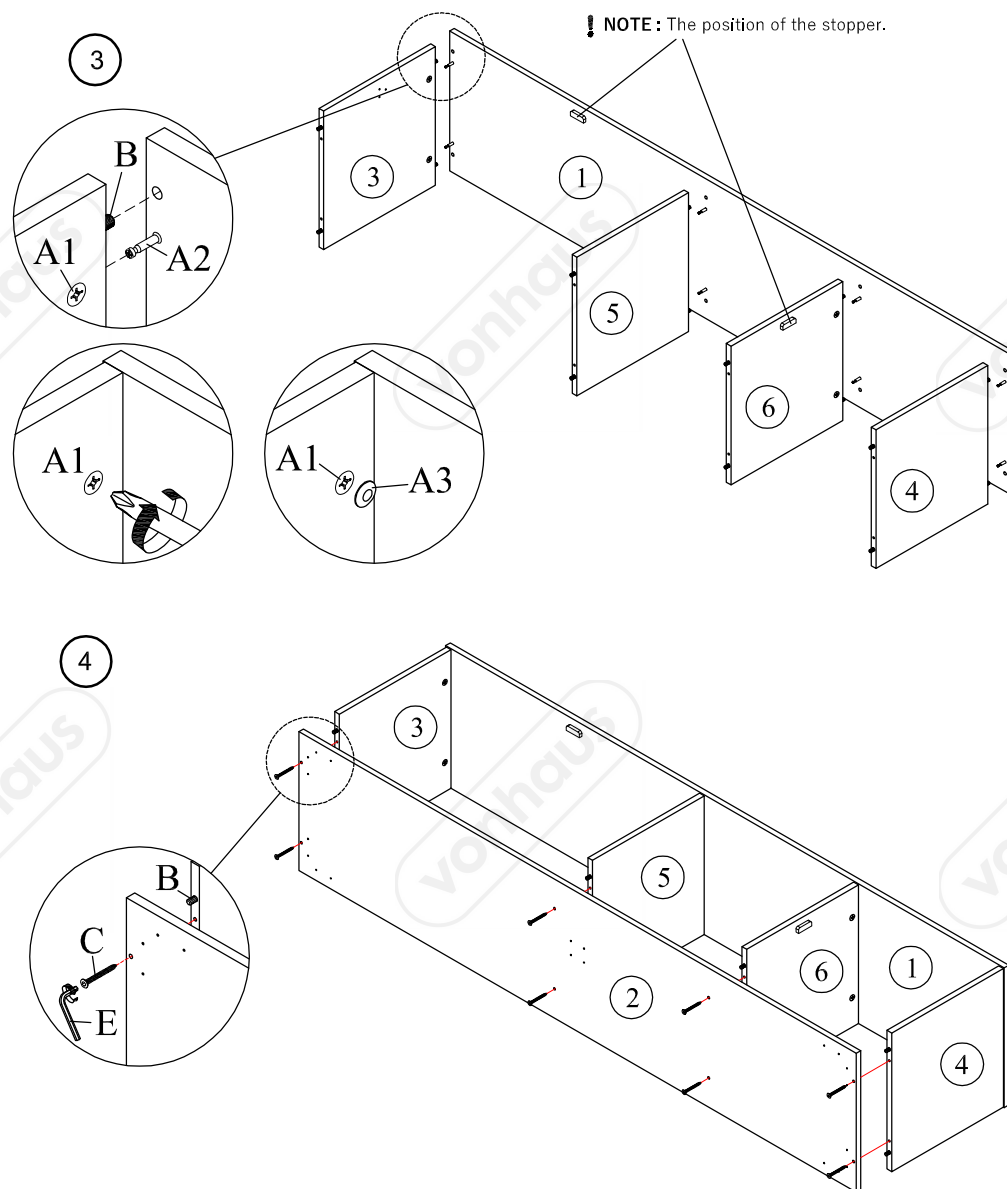

4

VonHaus.com

ASSEMBLY

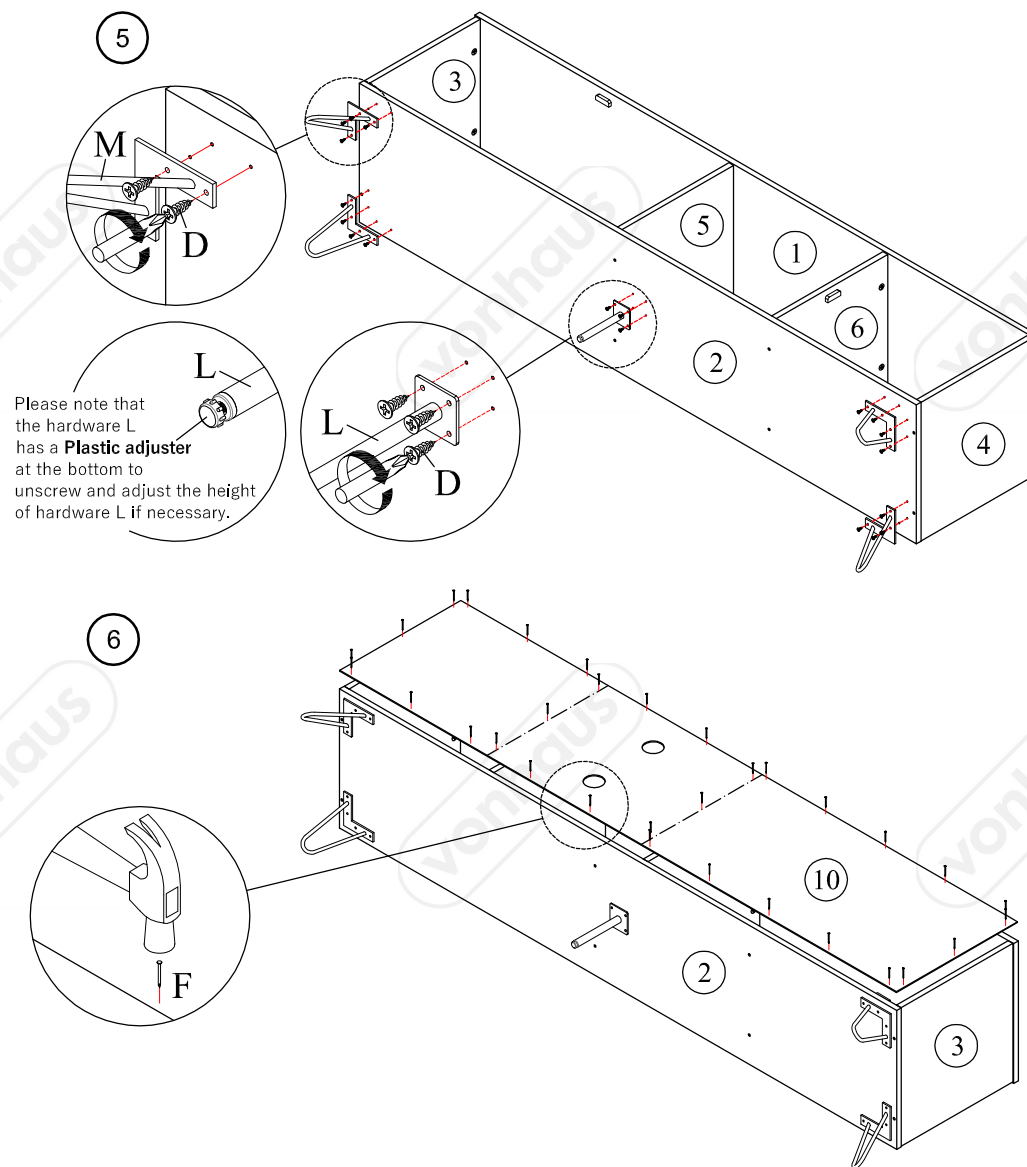

5

VonHaus.com