

10 GANG + 2 USB SOCKET TOWER

3500037 - Guide

INTENDED USE.

This Socket Tower is intended for domestic use only. It is not intended for use in commercial or industrial environments and is not suitable for use outdoors.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

GENERAL PRECAUTIONS.

When using any electrical appliance, basic safety precautions should always be followed to reduce the risk of fire, electrical shock, and injury to persons.

Do not allow the appliance to be used as a toy. Close attention is necessary when used near children. If the appliance is not functioning properly, has been dropped, damaged, left outdoors or immersed in liquid, do not use, contact DOMU Brands Customer Services.

Do not use the appliance if any parts appear to be faulty, missing or damaged. Ensure all parts are secure before using the lead.

CABLES AND PLUGS.

Do not handle the plug with wet hands.

Check to ensure your electricity supply matches that shown on the rating plate. The appliance must only be used as rated.

Keep the cable away from heated surfaces.

Do not unplug any plug by pulling on the cable. To unplug, grasp the plug, not the cable.

Do not use with a damaged cable or plug. If the supply cable is damaged, it must be replaced by a qualified engineer or an authorised service agent in order to avoid a hazard.

Only use one socket Socket Tower per socket and never plug an Socket Tower lead into another Socket Tower lead.

Never exceed the Socket Tower lead by plugging in appliances that together will exceed the maximum current rating stated on the Socket Tower lead. This could cause the plug to overheat.

Do not insert any objects into openings or cover the appliance.

CUSTOMER SERVICES

If, for any reason you are experiencing difficulty using this product, please contact hello@domu.co.uk

DISPOSAL INFORMATION

Please recycle where facilities exist. Check with your local authority for recycling advice.

WARRANTY

To register your product and find out if you qualify for a free extended warranty, go to:

www.VonHaus.com/warranty

Please retain a proof of purchase receipt or statement as proof of the purchase date.

The warranty only applies if the product is used solely in the manner indicated in the Warnings of this guide, and all other instructions have been followed accurately. Any abuse of the product or the manner in which it is used will invalidate the warranty.

Returned goods will not be accepted unless re-packaged and accompanied by a relevant and completed returns form. This does not affect your statutory rights.

No rights are given under this warranty to a person acquiring the appliance second-hand or for commercial or communal use.

COPYRIGHT

All material in this instruction manual are copyrighted by DOMU Brands Ltd.

Any unauthorised use may violate worldwide copyright, trademark, and other laws.

DECLARATION OF CONFORMITY

We:

DOMU Brands Ltd
5th Floor The Tower
Deva City Office Park
Manchester
M3 7BF

Declare under our sole responsibility that the product:

SKU: 3500037

Description: VonHaus 10 Gang + 2 USB Socket Tower.

To which this declaration relates is in conformity with the following directives:

93/68/EEC

VonHaus is a registered trademark of DOMU Brands Ltd.

Made in China for DOMU Brands Ltd M24 2RW.

VonHaus