

# 3 IN 1 SNACK MAKER

2013212 - Instruction Manual



# CONTENTS

---

Safety Instructions	1
Specification	2
Before First Use, Fitting & Removing Plates	3
Operation	4
Cleaning & Maintenance, Warranty	5

---

# SAFETY INSTRUCTIONS

---



## WARNING



PLEASE READ THESE INSTRUCTIONS CAREFULLY AND KEEP FOR FUTURE REFERENCE.

### INTENDED USE.

Only operate the VonShef® 3 in 1 Snack Maker for its intended purpose and within the parameters specified in this manual.

This machine is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless supervised or given appropriate instruction concerning the product's use by a person responsible for their safety.

This machine is not intended for use by children.

### GENERAL PRECAUTIONS.

When using an electrical appliance, basic precautions should always be followed, including the following:

Do not allow to be used as a toy. Children should be supervised to ensure they do not play with the appliance.

If the 3 in 1 Snack Maker is not functioning properly, has been dropped, damaged, left outdoors, or immersed in liquid, do not use, contact DOMU Brands Customer Services.

Do not use the 3 in 1 Snack Maker if any parts appear to be faulty, missing or damaged.

Ensure all parts are securely attached before use.

### CABLES AND PLUGS.

Do not handle plug or appliance with wet hands.

Check to ensure your electricity supply matches that shown on the rating plate. The product should only be used as rated. Preferably, the socket outlet should be protected by a Residual Current Device (RCD).

The use of an extension cable is not recommended.

Do not use with damaged cable or plug. If the supply cable is damaged, it must be replaced by a qualified engineer or authorised service agent in order to avoid a hazard.

Do not pull the cable around sharp edges or corners.

Keep the cord away from heated surfaces.

Do not let the cord hang over the edge of the table or countertop where it could be pulled on inadvertently by children or pets.

Do not leave unattended when plugged in. Unplug from outlet when not in use.

Turn off all controls before unplugging.

Do not unplug by pulling on cable. To unplug, grasp the plug, not the cable.

Always unplug before performing user maintenance, connecting or disconnecting attachments or changing accessories.

Ensure the cable is stored safely to prevent hazards.

### RISK OF PERSONAL INJURY.

Always locate your appliance away from the edge of the worktop, on a firm, flat, heat-resistant surface with sufficient space around all sides.

The 3 in 1 Snack Maker is not intended to be operated by means of an external timer or separate remote-control system.

Keep hair, loose clothing, fingers and all parts of the body away from openings and moving parts.

Do not insert any objects into openings or cover the appliance.

Do not overfill.

When using for the first time, your 3 in 1 Snack Maker may give off a 'new' smell or vapour. This will dissipate after a few uses.

Do not touch the Plates or the surface of the 3 in 1 Snack Maker as these will become very hot during use.

Do not lift or move the 3 in 1 Snack Maker whilst in use.

Do not leave the 3 in 1 Snack Maker unattended when in use.

Do not operate continuously for periods longer than those indicated in this manual.

Hot steam can escape from the appliance during operation; be careful when opening the Lid. Wearing oven gloves is recommended.

Always allow the 3 in 1 Snack Maker to cool completely before cleaning.

Do not lubricate any parts or carry out any maintenance or repair work other than that shown in this manual, or as advised by the DOMU Brands Customer Care Helpline.

Use only as described in this manual and use only DOMU Brands recommended attachments.

# TECHNICAL SPECIFICATION

VOLTAGE

V

220-240

RATED  
POWER

W






700

RATED  
FREQUENCY

Hz

50

# PRODUCT SPECIFICATION

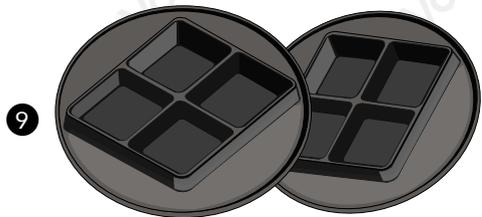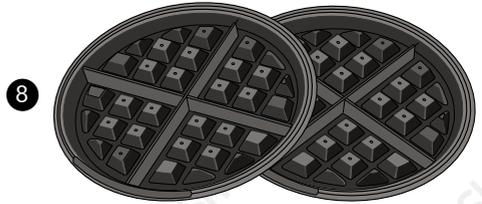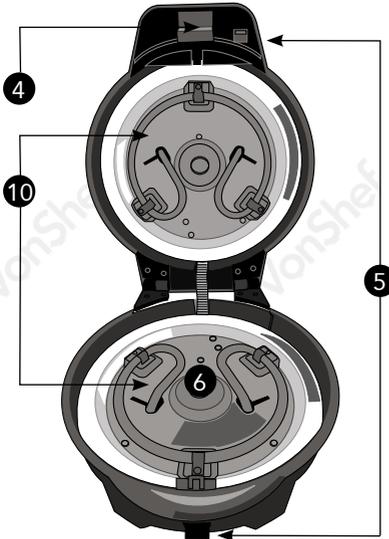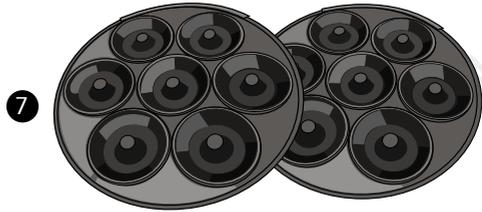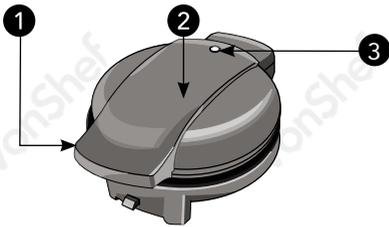

1. HANDLE.

2. LID.

3. POWER/READY LIGHT.

4. HANDLE LOCKING CLIP.

5. PLATE RELEASE BUTTON.

6. MAIN UNIT.

7. DOUGHNUT MAKER PLATES.

8. WAFFLE MAKER PLATES.

9. BROWNIE MAKER PLATES.

10. HEATING ELEMENTS.

# BEFORE FIRST USE

Before using this appliance for the first time, please ensure you complete the following steps:

- Carefully unpack the 3 in 1 Snack Maker and remove all packaging materials including any stickers or labels.
- Clean the **PLATES** using a damp cloth or sponge and mild detergent. Wipe dry with a soft dry cloth.
- Clean the **MAIN UNIT** of the appliance with a damp cloth or sponge.

**⚠ WARNING!** Never immerse the **MAIN UNIT** in water or any other liquid.

- Position the Snack Maker on a dry, level and heat-resistant surface.

**NOTE:** When using the Snack Maker for the first time, it may emit slight smoke or odour whilst any production residue burns off. This is completely normal and should disappear after a few minutes. However, as it may affect the flavour of your first batch made, it is recommended that you pre-heat the appliance, switch off and allow to cool.

- For best results, lightly coat the **PLATES** with a little cooking oil or cooking spray.


## FITTING & REMOVING THE PLATES

- Select your desired **PLATES** to be fitted.
- Align the lip on one side of the **PLATE** with the black hinges of the Snack Maker and firmly push down until it clicks into place.

**IMPORTANT:** Ensure BOTH **PLATES** are correctly fitted before switching on the appliance. DO NOT mix **PLATES**.

- To remove the **PLATES**, simply press the corresponding **PLATE RELEASE BUTTON** located next to the **HANDLE LOCKING CLIP** and the bottom section of the **MAIN UNIT**.

**⚠ WARNING!** Always allow the **PLATES** to completely cool before removing them from the **MAIN UNIT**.

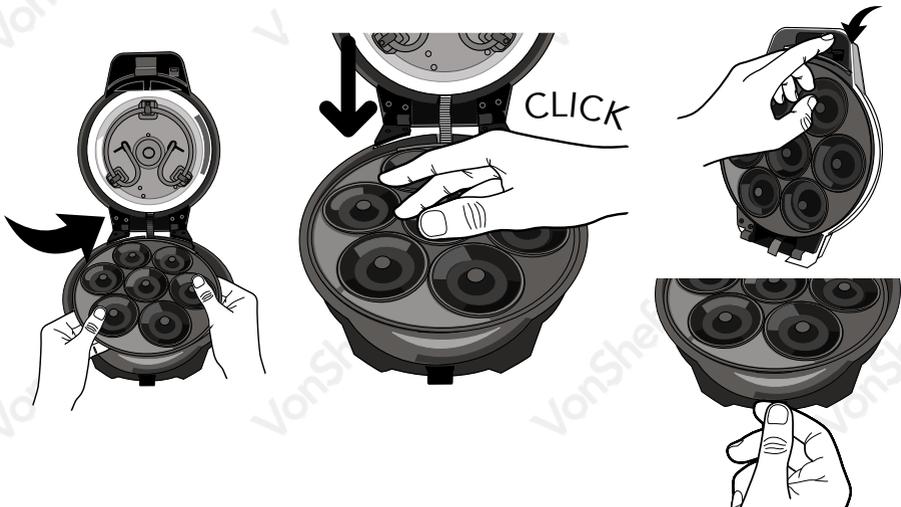

# OPERATION

- Before plugging in, slightly grease the upper and lower **PLATES** with a little oil or butter using a brush or spray.
- With the **LID** closed, plug the 3 in 1 Snack Maker in at the mains. The **POWER/READY LIGHT** will illuminate **red** to indicate that the Snack Maker is heating.
- Once the Snack Maker has reached cooking temperature, the **POWER/READY LIGHT** will go out.
- Open the **LID** using an oven mitt to avoid contact with the hot surface.
- Pour your pre-prepared mixture into each of the cooking zones of the lower **PLATE** and carefully close the **LID** using the **HANDLE**. Lock into place with the **HANDLE LOCKING CLIP**.

**CAUTION:** Do not overfill the **PLATES** to avoid the mixture overflowing from the appliance.

- ⚠ **WARNING!** Overfilling the **PLATES** may cause damage to the **LID** or **HANDLE LOCKING CLIP**. If there is resistance when attempting to close the **LID**, do not force. Leave to cool, clean as instructed and continue using less mixture.

**NOTE:** The **POWER/READY LIGHT** may cycle on and off during the cooking process. This is completely normal as the appliance maintains its temperature and it is not a fault with the appliance.

**TIP:** Try to resist opening the **LID** to check on the progress of your food in the first minute or two of cooking. Lifting the **LID** too early could result in the mixture sticking and splitting.


- Continue to cook until the desired level of browning has been attained. Usual cooking time is 5-6 minutes.
- Once cooked, lift the **LID** by the **HANDLE** to open the Snack Maker.

- ⚠ **WARNING!** Take extra care when opening the **LID** as steam may escape. Contact with steam can cause severe burns. Avoid contact with the upper and lower **PLATES** as they are very hot.

- Remove the food with the help of a plastic or wooden spatula.

**CAUTION:** Never use metal utensils to remove the food from the **PLATE** as this will damage the surface.

- If you intend to make batches of waffles, brownies or doughnuts, close the **LID** between batches to conserve the heat.

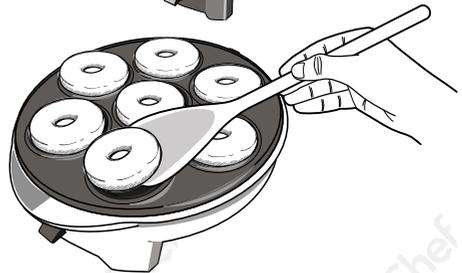

- Disconnect the Snack Maker from the mains and allow to cool completely.

# CLEANING & MAINTENANCE

---

**CAUTION:** Before carrying out cleaning or maintenance, disconnect the appliance from the mains and allow to cool.

- Remove the **PLATES** using the **PLATE RELEASE BUTTONS** and clean using a damp sponge with warm water and mild detergent.
- If necessary, leave the **PLATES** to soak in warm water for several minutes before scrubbing with a non-abrasive sponge or scouring brush to remove any baked on ingredients.

**CAUTION:** Do not use abrasive cleaners or scouring pads to clean the Snack Maker as these may damage the surfaces.

- Clean the **MAIN UNIT** with a soft, damp cloth or sponge.



**WARNING!** Do not immerse the Snack Maker or power cord in water or any other liquid to clean.

Dry the Snack Maker and **PLATES** thoroughly before storing in a cool dry place with the power cord loosely coiled.

**CAUTION:** Never store the Snack Maker when it is wet or hot.

# CUSTOMER SERVICES

---

If you are having difficulty using your product and require support, please contact: [hello@domu.co.uk](mailto:hello@domu.co.uk)

# DISPOSAL INFORMATION

---

Please recycle where facilities exist. Check with your local authority for recycling advice.

# WARRANTY

---

To register your product and find out if you qualify for a free extended warranty, go to:

[www.VonShef.com/warranty](http://www.VonShef.com/warranty)

Please retain a proof of purchase receipt or statement as proof of the purchase date.

The warranty only applies if the product is used solely in the manner indicated in this manual and all instructions have been followed accurately. Any abuse of the product or the manner in which it is used will invalidate the warranty.

Returned goods will not be accepted unless re-packaged in its original packaging and accompanied by a relevant and completed returns form. This does not affect your statutory rights.

No rights are given under this warranty to a person acquiring this appliance second-hand or for commercial or communal use.

# COPYRIGHT

---

All material in this instruction manual are copyrighted by DOMU Brands Ltd.

Any unauthorised use may violate worldwide copyright, trademark, and other laws.

Thank you for purchasing the 3 in 1 Snack Maker.

VonShef® is a registered trademark of DOMU Brands Ltd  
Made in China for DOMU Brands Ltd M24 2RW.

---